


# SIM5300E\_NTP\_Application Note

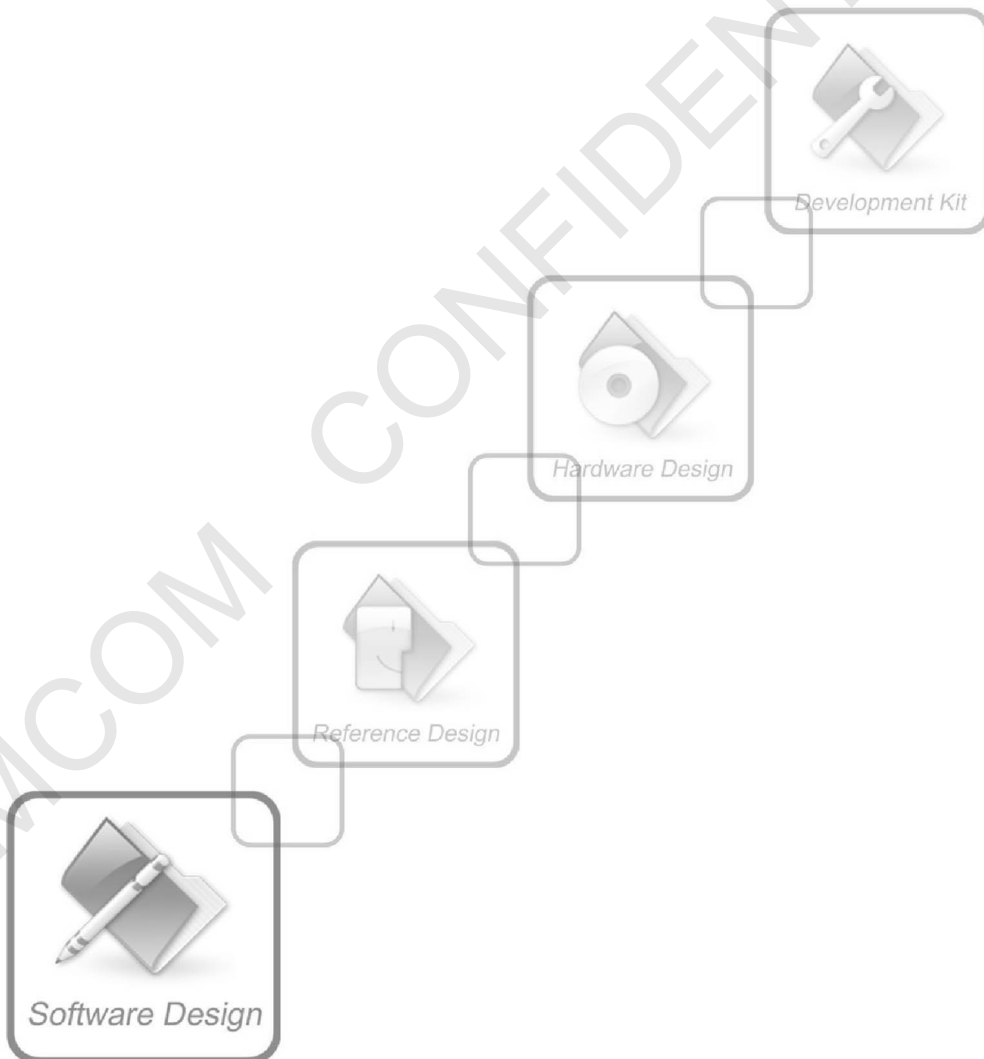

---

<b>Document Title:</b>	SIM5300E_NTP_Application Note
<b>Version:</b>	1.00
<b>Date:</b>	2016-11-04
<b>Status:</b>	Release
<b>Document Control ID:</b>	SIM5300E_NTP_Application Note_V1.00

---

### **General Notes**

SIMCom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by SIMCom. The information provided is based upon requirements specifically provided to SIMCom by the customers. SIMCom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by SIMCom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

### **Copyright**

This document contains proprietary technical information which is the property of SIMCom Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

***Copyright © Shanghai SIMCom Wireless Solutions Ltd. 2017***

---

## SCOPE

---

This document describes how to use the internal NTP function of SIM5300E through AT commands.

Examples are also given for reference.

This document can be used for SIM5300 serial modules, like SIM5300E.

This document is subject to change without notice at any time.

SIMCOM CONFIDENTIAL FILE

## CONTENTS

---

<b>General Notes</b> .....	1
<b>Copyright</b> .....	1
<b>Copyright © Shanghai SIMCom Wireless Solutions Ltd. 2017</b> .....	1
1. Activate bearer profileThe examples as follows.....	1
2. Set NTP parameters and Get the network time .....	1
3. Deactivate bearer profile.....	1

SIMCOM CONFIDENTIAL FILE

## 1. ACTIVATE BEARER PROFILE THE EXAMPLES AS FOLLOWS.

---

```
AT+SAPBR=3,1,"Contype","GPRS" //Set bearer parameter
```

```
OK
```

```
AT+SAPBR=3,1,"APN","CMNET"
```

```
OK
```

```
AT+SAPBR =1,1 // Activate bearer context
```

```
OK
```

```
AT+SAPBR=2,1
```

```
+SAPBR: 1,1,"10.89.193.1"
```

```
OK
```

## 2. SET NTP PARAMETERS AND GET THE NETWORK TIME

---

```
AT+CNTP="pool.ntp.org ",8,1,2
```

```
OK
```

```
AT+CNTP
```

```
+CNTP: 1,"13/04/18,14:38:30"
```

```
OK
```

## 3. DEACTIVATE BEARER PROFILE

---

```
AT+SAPBR=0,1 // Deactivate bearer context
```

```
OK
```

## **CONTACT US:**

---

Shanghai SIMCom Wireless Solutions Ltd.

Add: Bldg A, SIM Technology Bldg., No.633, Jinzhong Road, Changning Dist., Shanghai P.R. China  
200335

Tel: +86 21 32523424

Fax: +86 21 32523020

URL: [www.simcomm2m.com](http://www.simcomm2m.com)

SIMCOM CONFIDENTIAL FILE